

User Servicing Instructions

Replace the lamp.

Step1: Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

Step2: Pull lamp and plastic base straight out of lampholder.



Step3: Replace lamp with only 3.5 Volt super bright type lamp.



If the new lamp base does not fit in lampholder, follow the steps below before step 3.

a) Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out.

b) Thread leads of new lamp through holes in old base with one lead in each hole.

c) After lamp is fully inserted into base, bend each lead up, like other lamps in the light set so that the leads will touch the contacts inside the lampholder.



CAUTION -To reduce the risk of overheating, replace burned-out lamps promptly. Use 3.5 volt lamps only.

Trouble Shooting:

Do not allow any other electric items to be plugged into your sculpture. It can cause the lights not to work. If this happens, the fuses may have blown and would need to be replaced. (See safety plug replacement)

If a bulb does not light, we have included extras in a small bag.

Replacing lights that are burned out will keep the rest lit longer. (See above diagram)

If a section of lights does not work, run your hands over the unit ones and see if you find a bulb that has become loose in the socket. Pushing the bulbs back down can relight the section. Also be sure that all the connections are made between the parts that you may have connected.

Model No.: Z3180113

FOR INDOOR AND OUTDOOR USE
120V 60Hz AC

MADE IN CHINA

Product Works

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

c) This seasonal use product is not intended for permanent installation or use.

d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.

e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

f) Do not let lamps rest on the supply cord or on any wire.

g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.

h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

i) Do not use this product for other than its intended use.

j) Do not hang ornaments or other objects from cord, wire, or light string.

k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

l) Do not cover the product with cloth, paper or any material not part of the product when in use.

m) This product is equipped with push-in type lamps. Do not twist lamps.

n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.

o) Read and follow all instructions that are on the product or provided with the product.

p) SAVE THESE INSTRUCTIONS

Use and Care Instructions

a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.

b) If the product is placed on a tree, the tree should be well secured and stable.

 
c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.

d) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.


e) When not in use, store neatly in a cool, dry location protected from sunlight.

NORTHBROOK.IL60062


1-224-406-8810

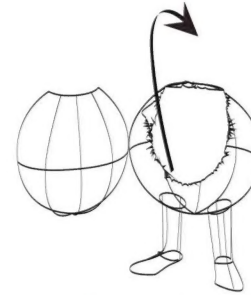

 
Open the front of body, and turn up the head which in the stomach

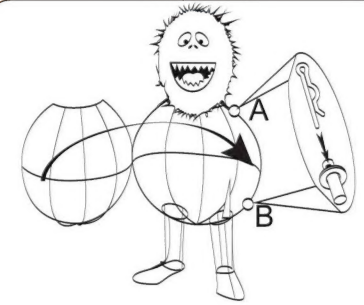

 Close the front of the body and secure peg with cotter pin at point A and B.

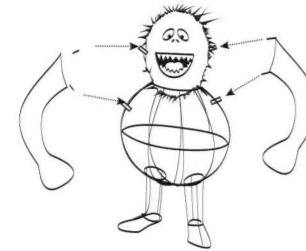

 
Insert the two arms into head and body into slots where arrows show.

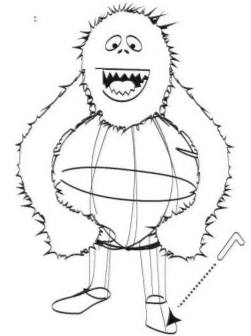

Secure using 4 ground stakes

HOW TO USE LAWN STAKE (IF APPLICABLE)

 If item is to be used outside, secure in place as shown. Hook over base of wire sculpture as shown and push down into the ground.

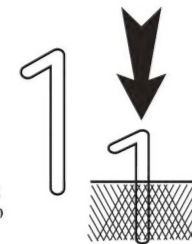

INSERT POLE INTO WIRE SLEEVE

SLEEVE POLE

